


INSTRUCTIONS /
BRUGSVEJLEDNING
FRAME SHELF
~


by Lassen.
Copenhagen

FRAME SHELF


INSTRUCTIONS / BRUGSVEJLEDNING

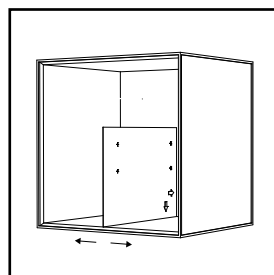


1

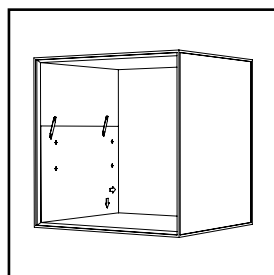


2

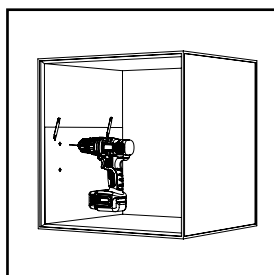


3

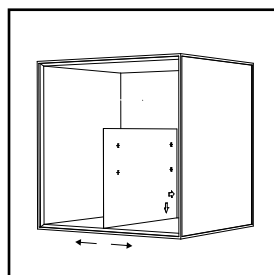

4

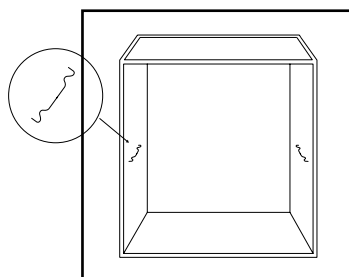

5

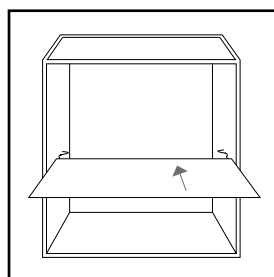

6

TOOL LIST: Tape, drill and included drill bit.

Take out your enclosed assembly template. You can attach your shelf in 3 possible positions: 1/3 from the bottom, halfway or 1/3 from the top.

- 1 If the shelf is to be attached 1/3 from the bottom or halfway, place the template against the left side so that one arrow is pointing to the back and the other arrow is pointing to the bottom. If the shelf is to be attached 1/3 from the top, place the template against the right side so that one arrow is pointing to the back and the other arrow is pointing to the top.
- 2 Attach the assembly template with tape making sure that it is level.
- 3 Use the supplied 3mm drill bit to drill into the marked crosses. Remember, if you want to attach the shelf 1/3 from the bottom or top, drill into the two crosses closest to the bottom or top arrow. If you want to attach the shelf halfway, drill into the two crosses furthest away from the bottom arrow.
- 4 When you have finished drilling the first side, place the assembly template directly on the opposite side facedown so that the text and arrows cannot be seen and only the drilled holes are showing. Make sure that the assembly template is level and attach with tape. Using the 3mm drill bit, drill into the holes you have already drilled into the template.

VÆRKTØJSLISTE: Tape, boremaskine og medfølgende bor.

Vælg hvor I ønsker hylden placeret. Den kan placeres 1/3 fra top el. bund eller i midten af Frame kassen.

- 1 Placer den vedlagte skabelon langs den ene side, så de anførte pile peger mod bagbeklædningen og top eller bund. Hvis hylden skal side nede eller i midten, start da i venstre side. Hvis hylden skal sidde oppe, start da i højre side.
- 2 Monter skabelonen med tape på den side de første huller skal bores. Vær sikker på at skabelonen er i vatter.
- 3 Bor huller i de angivne krydser med det medfølgende bor. Obs! Krydserne tættest på pilene bruges såfremt hylden skal sidde 1/3 fra top eller bund. Krydserne længst væk fra pilene bruges såfremt hylden skal placeres i midten.
- 4 Flyt skabelonen direkte over på modsatte side (så teksten på skabelonen ikke er synlig). Tjek at skabelonen er i vatter og tape skabelonen fast. Bor hullerne i de allerede borede huller på skabelonen.